


Handee

# magnetic catch

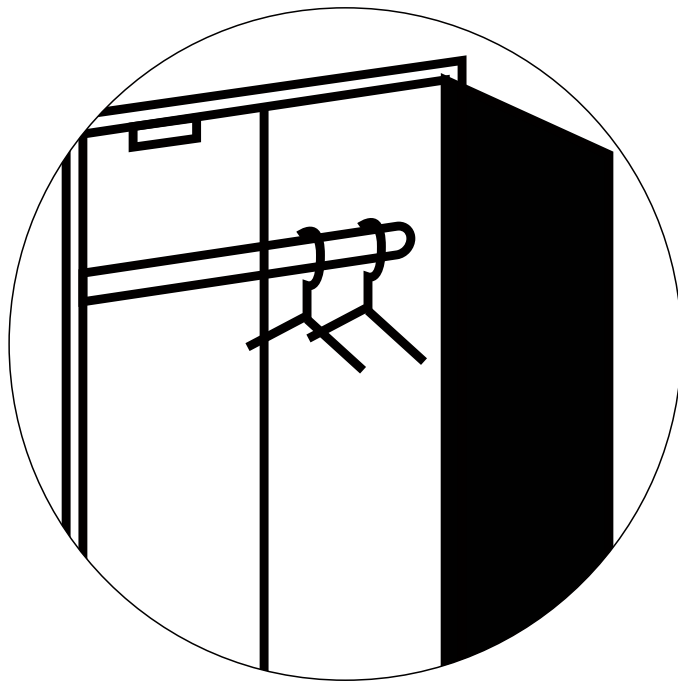

**Heavy Duty**  
For Larger Doors  
& Wardrobes

**MAGNETS**   
AUSTRALIA

## Mounting Instructions

1. The catch can be mounted on the bottom, top or side of your shelf or cupboard. Find a suitable location for the unit
2. When you have found a location pre-drill your holes for the best fit and finish by either measuring the distance between the holes on the catch or by using the catch as a template.
3. Lightly tighten the screws so the catch can still move.
4. When the catch is fitted, place the striker plate onto the catch - **pointy face-out** & close the door firmly so that the points pre-mark the mounting position on the door.
5. Screw the striker plate onto the door and tighten the catch screws. If you have difficulty screwing in the striker plates, pre drill the holes and then attach the plates.